



AU40Z - 3D Keyboard Control

PAN/TILT:

Move the joystick ? until the camera reaches the desired position. To increase the speed of movement, move the joystick further from center.

ZOOM :

Twist the joystick clockwise to zoom in, counterclockwise to zoom out.

Lens Control:

Focus, Iris, Zoom- Press and hold the appropriate lens control key ? until the desired effect is seen

* Pictures and specifications are subject to change without prior notice